



### Cone Crusher

While Breaker working, the rotation of motor winds one regular place and fastens sports of putting by belt pulley or shaft coupling, drive shaft and cone being under the compelling movement, and then make the broken taper's broken wall close and leave the firm white wall surface sometimes, make ore assault constantly broken, pinch and crooked function and then to make ore broken. When there are nobreak matters or overloads for a certain reason, spring insurance system will be used by itself, the arrange ore mouth will be increase, unusual matter will be discharged from broken, if unusual matter block, it also can use system of clears, make the arrange ore increase constantly, and then make the unusual matter out. Under the function of the spring, the arrange ore mouth will reset automatically, the machine resumes normal. This breaker has three types of rough, moderate and careful, you can choose to purchase according to your requirement.



### Feature Of Cone Crusher:

Type	Weight (T)	Power (kw)	Diameter of Broken taper (mm)	Width of the feed opening (mm)	Max. feed size (mm)	Adjustable range of discharge opening(mm)	capacity(t/h)	
PYB	600	5	30	600	75	65	12-25	20-40
PYD				600	40	35	2-13	12-23
PYB	900	11.2	55	900	135	115	15-50	60-105
PYZ				900	70	60	5-20	50-90
PYD				900	50	50	3-13	20-65
PYB	1200	35	130	1200	170	145	20-50	110-168
PYZ				1200	115	100	8-25	42-135
PYD				1200	60	50	3-15	18-105
PYB	1750	50.2	160	1700	250	215	10-30	280-480
PYZ				1700	215	185	10-30	115-320
PYD				1700	100	85	5-15	75-230
PYB	2200	80	260 280	2200	350	300	30-60	590-1000
PYZ				2200	275	230	10-30	200-580
PYD				2200	130	100	5-15	125-350